

DATASHEET

# GZ115 / GZ215 SUPERCAPACITOR

Revision 4.5, May 2020

## **Electrical Specifications**

The GZ115 is a single cell supercapacitor. The GZ215 is a dual cell supercapacitor with two GZ115 cells in series, so GZ215 capacitance = Capacitance of GZ115/2 and GZ215 ESR =  $2 \times GZ115 \times CR$ .

## **Table 1: Absolute Maximum Ratings**

Parameter	Name		Conditions	Min	Max	Units
Terminal Voltage	V <sub>peak</sub>	GZ115		0	2.75	V
Voltage		GZ215			5.5	
Temperature	T <sub>max</sub>			-40	+70	°C

## **Table 2: Electrical Characteristics**

Parameter	Name		Conditions	Min	Typical	Max	Units
Terminal Voltage	Vn	GZ115		0		2.5	v
		GZ215	1	0		5.0	
Capacitance	С	GZ115	DC, 23°C	144	180	216	mF
		GZ215		72	90	108	
ESR	ESR	GZ115	DC, 23°C		55	66	mΩ
		GZ215			110	132	
Leakage Current	١L		2.3V, 23°C 120hrs		1	2	μA
RMS Current	I <sub>RMS</sub>		23°C			4.5	Α
Peak Current <sup>1</sup>	lΡ		23°C			30	A

<sup>1</sup>Non-repetitive current, single pulse to discharge fully charged supercapacitor.

## **Table 3: Thickness**

GZ115F	1.2mm	No adhesive tape on underside of the supercapacitor	GZ115G		Adhesive tape on underside, release tape removed
GZ215F	2.5mm		GZ215G	2.6mm	

This datasheet should be read in conjunction with the <u>CAP-XX Supercapacitor Product Guide</u> which contains information common to our product lines.



## **Definition of Terms**

In its simplest form, the Equivalent Series Resistance (ESR) of a capacitor is the real part of the complex impedance. In the time domain, it can be found by applying a step discharge current to a charged cell as in Fig. 1. In this figure, the supercapacitor is pre-charged and then discharged with a current pulse, I =1A for duration 0.01 sec.

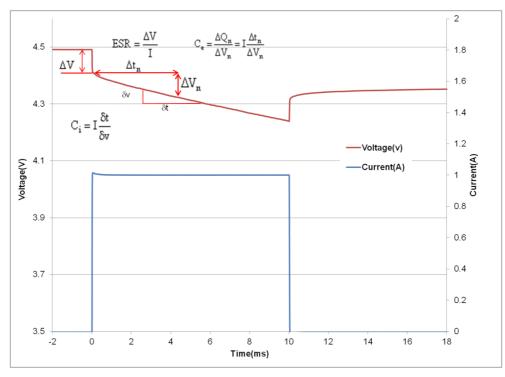


Fig 1: Effective capacitance, instantaneous capacitance and ESR for a GZ215


The ESR is found by dividing the instantaneous voltage step ( $\Delta V$ ) by I. In this example = (4.49V - 4.42V)/1A = 30m $\Omega$ .

The instantaneous capacitance  $(C_i)$  can be found by taking the inverse of the derivative of the voltage, and multiplying it by I.

The effective capacitance for a pulse of duration  $\Delta t_n$ ,  $Ce(\Delta t_n)$  is found by dividing the total charge removed from the capacitor ( $\Delta Q_n$ ) by the voltage lost by the capacitor ( $\Delta V_n$ ). For constant current  $Ce(\Delta t_n) = I \times \Delta t_n/\Delta V_n$ . Ce increases as the pulse width increases and tends to the DC capacitance value as the pulse width becomes very long (~10 secs). After 2msecs, Fig 1 shows the voltage drop  $V_{2ms} = (4.42 \text{ V} - 4.36 \text{V}) = 60 \text{mV}$ . Therefore  $Ce(2ms) = 1A \times 2ms/60 \text{mV} = 33.3 \text{mF}$ . After 10ms, the voltage drop = 4.42 V - 4.24 V = 180 mV. Therefore  $Ce(10ms) = 1 \text{ A} \times 10ms/180 \text{mV} = 55.6 \text{mF}$ . The DC capacitance of a GZ215 = 90 mF. Note that  $\Delta V$ , or IR drop, is not included because very little charge is removed from the capacitor during this time. Ce shows the time response of the capacitor and it is useful for predicting circuit behaviour in pulsed applications.




## **Measurement of DC Capacitance**

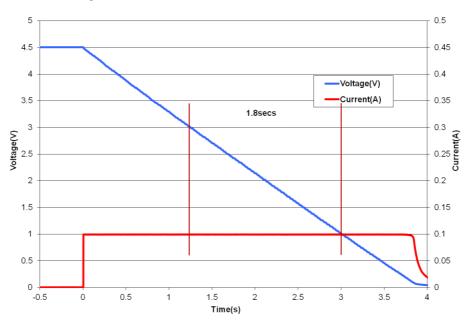

## Fig 2: Measurement of DC Capacitance for a GZ215

Fig 2 shows the measurement of DC capacitance by drawing a constant 100mA current from a fully charged supercapacitor and measuring the time taken to discharge from 1.5V to 0.5V for a single cell, or from 3V to 1V for a dual cell supercapacitor. In this case,  $C = 0.1A \times 1.8s / 2V = 90mF$ , which is well within the 90mF +/- 20% tolerance for a GZ215 cell.

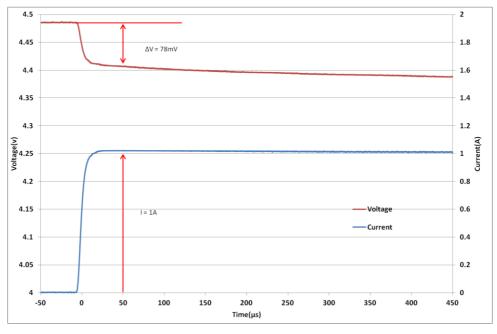


## Measurement of ESR

## Fig 3: Measurement of ESR for a GZ215

Fig 3 shows DC measurement of ESR by applying a step load current to the supercapacitor and measuring the resulting voltage drop. CAP-XX waits for a delay of 50µs after the step current is applied to ensure the voltage and current have settled. In this case the ESR is measured as  $78\text{mV}/1\text{A} = 78\text{m}\Omega$ .

GZ115 / GZ215 DATASHEET



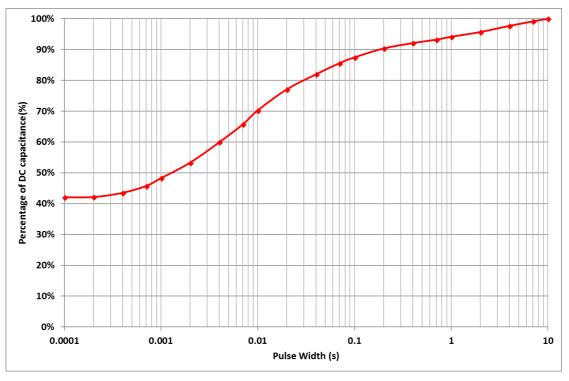

## **Effective Capacitance**

## Fig 4: Effective Capacitance

Fig 4 shows the effective capacitance for the GZ115, GZ215 @ 23°C. This shows that for a 1ms PW, you will measure 48% of DC capacitance or 86mF for a GZ115 or 43mF for a GZ215. At 10ms you will measure 70% of the DC capacitance, and at 100ms you will measure 87% of DC capacitance. Ceffective is a time domain representation of the supercapacitor's frequency response. If, for example, you were calculating the voltage drop if the supercapacitor was supporting 1A for 10ms, then you would use the Ceff(10ms) = 70% of DC capacitance = 63mF for a GZ215, so Vdrop = 1A x ESR + 1A x duration/C = 1A x 110m $\Omega$  + 1A x 10ms / 63mF = 269mV. The next section on pulse response shows how the effective capacitance is sufficient for even short pulse widths.

## **Pulse Response**


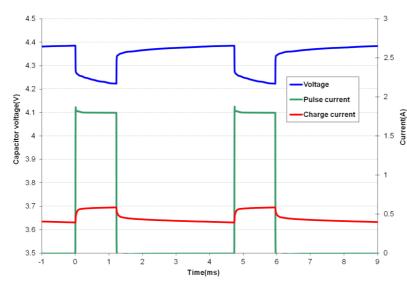


Fig 5 shows that the GZ215 supercapacitor does an excellent job supporting a GPRS class 10 pulse train, drawing 1.8A for 1.1ms at 25% duty cycle. The source is current limited to 0.6A and the supercapacitor provides the 1.2A difference to achieve the peak current. At first glance the freq response of Fig 8 indicates the supercapacacitor would not support a 1ms pulse, but the Ceff of 43mF coupled with the low ESR supports this pulse train with only ~162mV droop in the supply rail.

Fig 5: GZ215 Pulse Response with GPRS Class 10 Pulse Train




## DC Capacitance variation with temperature

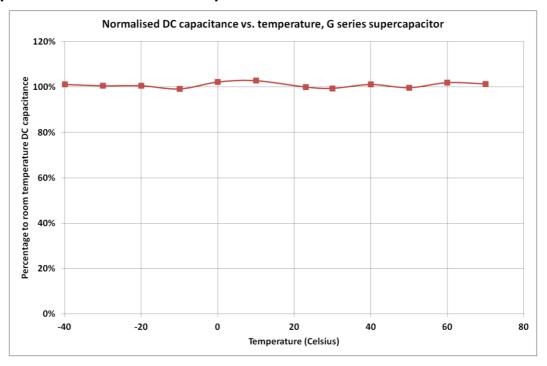

## Fig 6: Capacitance change with temperature

Fig 6 shows that DC capacitance is approximately constant with temperature.

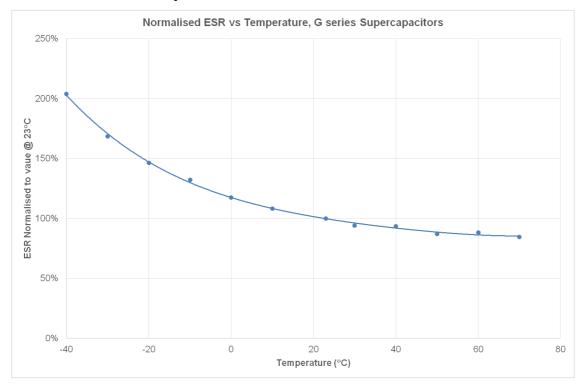

## ESR variation with temperature






Fig 7 shows that ESR at -40°C is ~2 x ESR at room temp, and that ESR at 70°C is ~0.85 x ESR at room temperature.




## **Frequency Response**

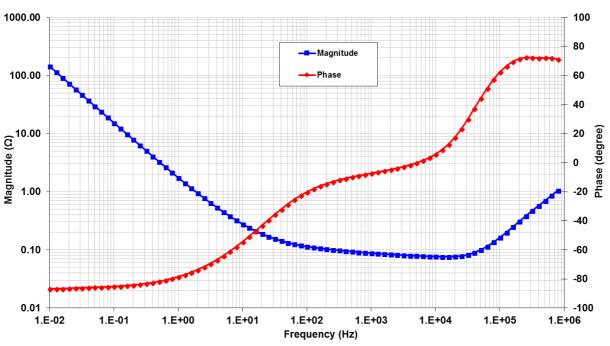

GZ215 Magnitude and Phase vs. Frequency



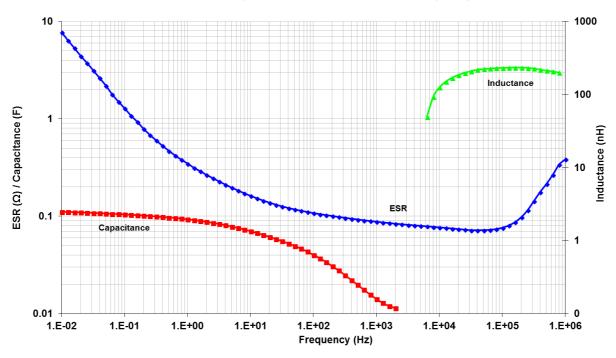


GZ215 ESR, Capacitance and Inductance vs. Frequency

## Fig 9: Frequency Response of ESR, Capacitance & Inductance

Fig 8 shows the supercapacitor behaves as an ideal capacitor until approx 20 Hz when the magnitude no longer rolls off proportionally to 1/freq and the phase crosses -45°. Performance of supercapacitors with frequency is complex and the best predictor of performance is Fig 4 showing effective capacitance as a function of pulsewidth.




## Leakage Current

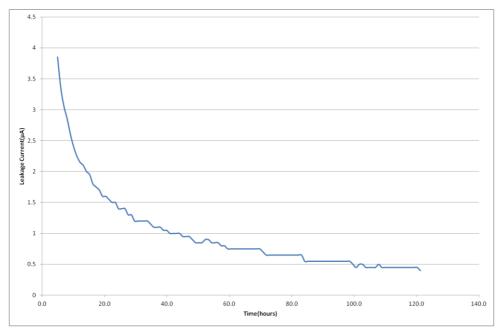

## Fig 10: Leakage Current

Fig 10 shows the leakage current for GZ115 at room temperature. The leakage current decays over time, and the equilibrium value leakage current will be reached after ~120hrs at room temperature. The typical equilibrium leakage current is  $0.5\mu$ A at room temperature. At 70°C leakage current will be ~5 $\mu$ A.

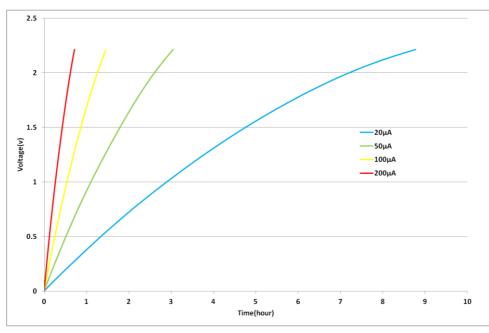

## Charge Current




The corollary to the slow decay in leakage currents shown in Fig 10 is that charging a supercapacitor at very low currents takes longer than theory predicts. At higher charge currents, the charge rate is as theory predicts. For example, it should take 0.18F x 2.2V / 0.00002A = 5.5hrs to charge a 0.18 F supercapacitor to 2.2V at 20 $\mu$ A, but Fig 11 shows it took 9hrs. At 100 $\mu$ A charging occurs at a rate close to the theoretical rate.

## GZ115 / GZ215 DATASHEET



## **RMS Current**

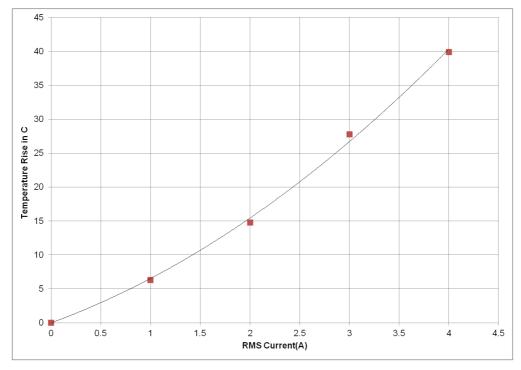

## Fig 12: Temperature rise in GZ215 with RMS current

Continuous current flow into/out of the supercap will cause self heating, which limits the maximum continuous current the supercapacitor can handle. This is measured by a current square wave with 50% duty cycle, charging the supercapacitor to rated voltage at a constant current, then discharging the supercapacitor to half rated voltage at the same constant current value. For a square wave with 50% duty cycle, the RMS current is the same as the current amplitude. Fig 12 shows the increase in temperature as a function of RMS current. From this, the maximum RMS current in an application can be calculated, for example, if the ambient temperature is 40°C, and the maximum desired temperature for the supercapacitor is 70°C, then the maximum RMS current should be limited to 3.2A, which causes a 30°C temperature increase.

## **CAP-XX Supercapacitors Product Guide**

Refer to the package drawings in the <u>CAP-XX Supercapacitors Product Guide</u> for detailed information of the product's dimensions, PCB landing placements, active areas and electrical connections, as well for information on endurance and shelf life, transportation and storage, assembly and soldering, safety and RoHS/REACH certification.


Revision 4.5, May 2020

GZ115 / GZ215 DATASHEET



## **Package Drawings**

## Single cell

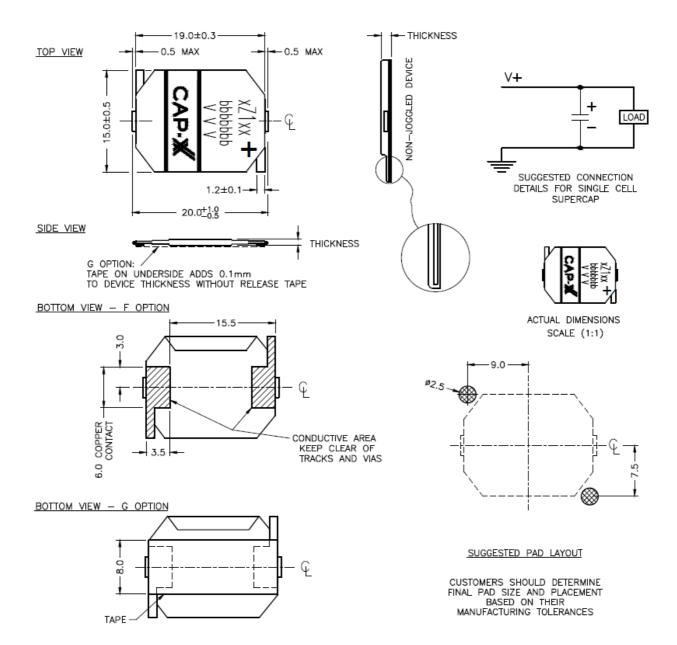

#### GZ115 / GZ215 DATASHEET



#### **Dual cell**

